

Modern small Amtrak Station kit in HO scale

This kit includes all building parts milled in white styrene plastic, laser cut acrylic, self-adhesive plywood and clear window glazing. All parts fit together but may need light sanding in joints for cosmetic reasons. The model needs painting.

Some model building and painting skills are required.




Manufactured by Custom Cuts by 

Summit USA LLC, 512A Ford Street, Lake Charles, LA 70601
www.summit-customcuts.com


Assembly instructions for Amtrak Station

Thank you for buying this Modern small Amtrak Station kit. Please take some time to read these instructions before you begin assembling.


This kit is milled in styrene plastic and laser cut acrylic and self-adhesive wood, and is very easy to glue together using Plastruct Plastic Weld or MicroMark Same Stuff. Take your time to identify all parts, lay them out and clean them for any burrs before gluing them together. Handle the acrylic pieces with care, they break easier than styrene.

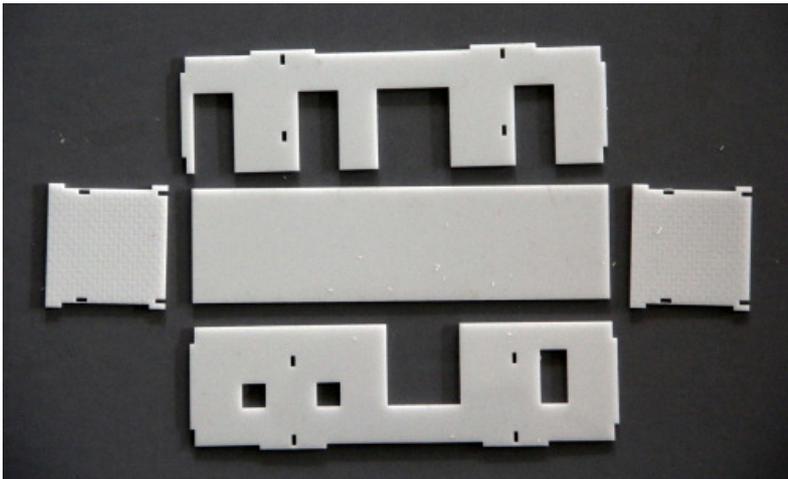

Floor and walls in acrylic

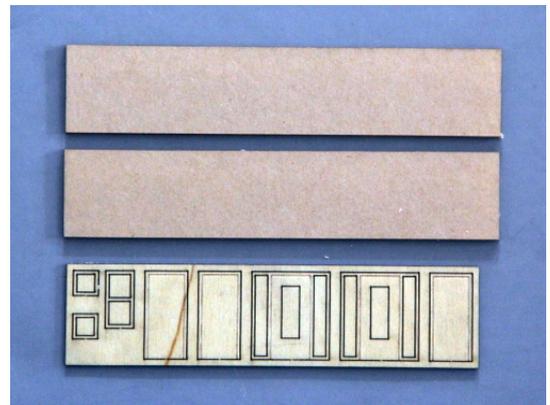



Clear acrylic and laser cut wood

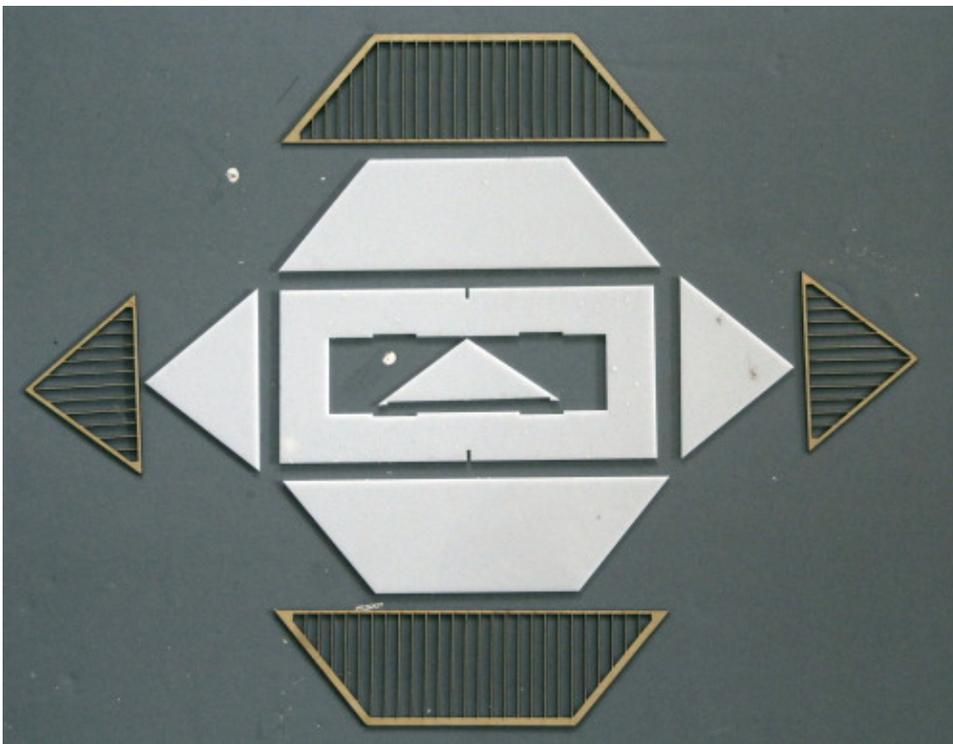



Acrylic roof and self-adhesive wood trim




Styrene roof support, 8 pcs.

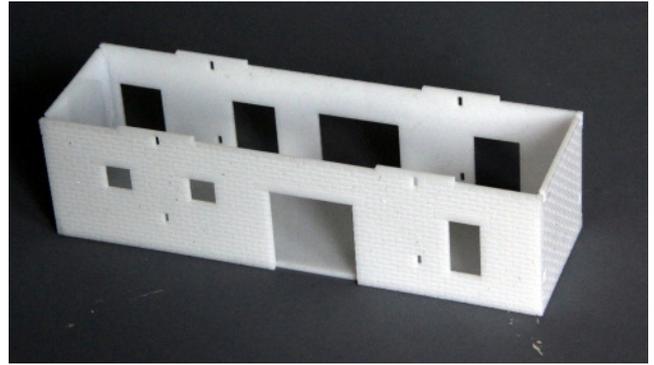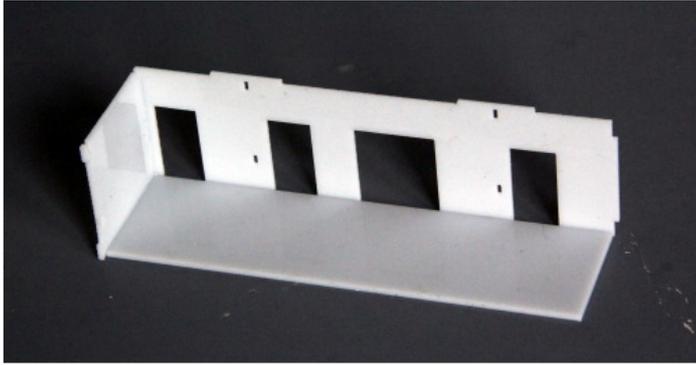


Start by assembling the four walls; glue them to the EDGE of the floor piece.

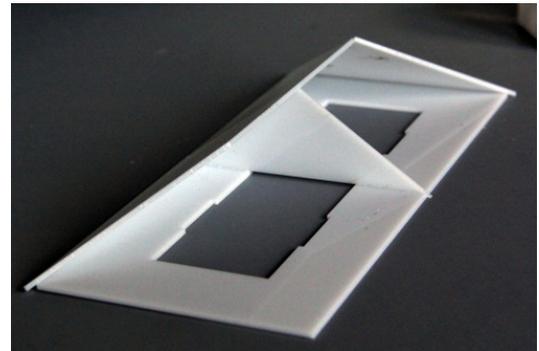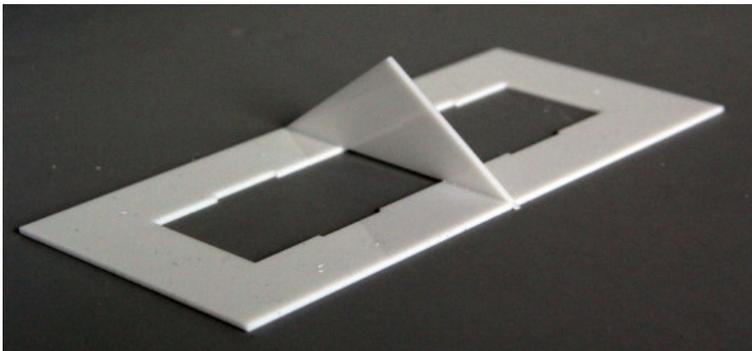


Glue the support on the roof base, then glue on the roof pieces.

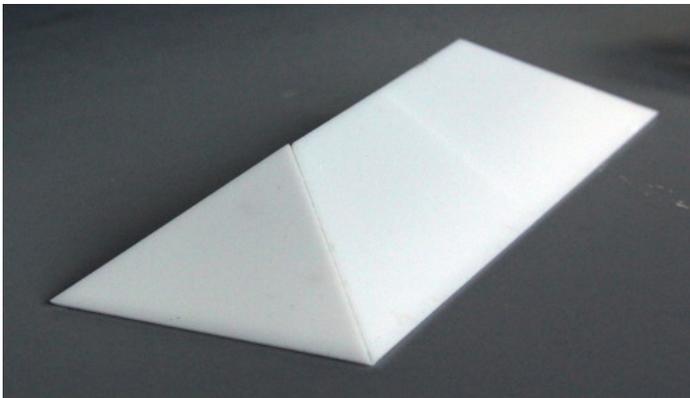



Mount the roof trim on the roof as shown. Be careful to position it correct in the first attempt, the adhesive sticks instantly

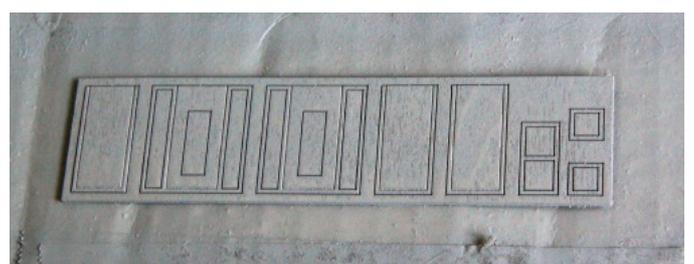

Mount the roof supports on a piece of wood or plastic as shown. Airbrush the roof supports and window/door sprue with a gray primer.

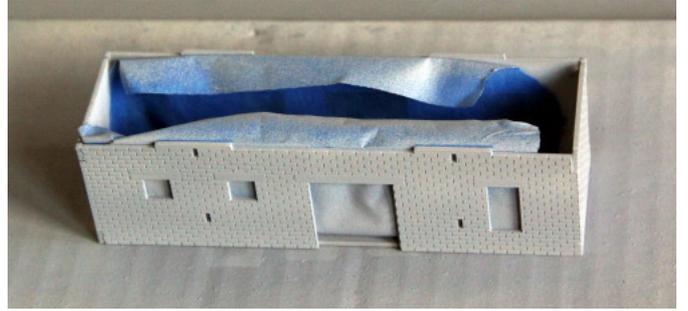


Cover the inside of the walls with tape and paint the roof and the building a coat of gray primer.

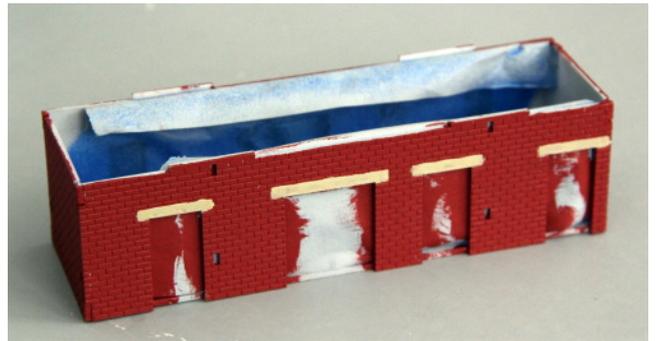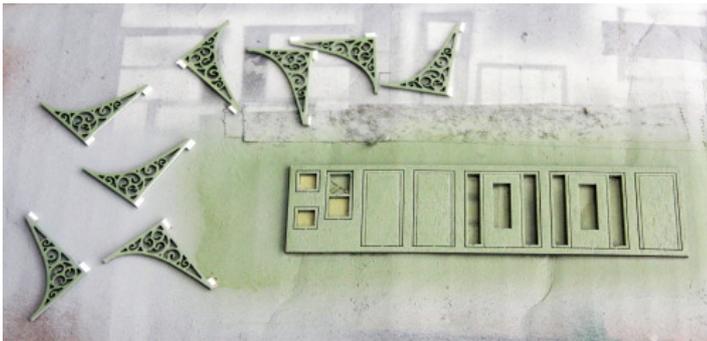


Paint the windows, doors and roof supports light green. Paint the building a maroon brick color, then paint the window and door top supports concrete.



Paint the roof medium-dark green. Apply a coat of Roberts Brick Mortar Formula to the walls of the building and let dry.

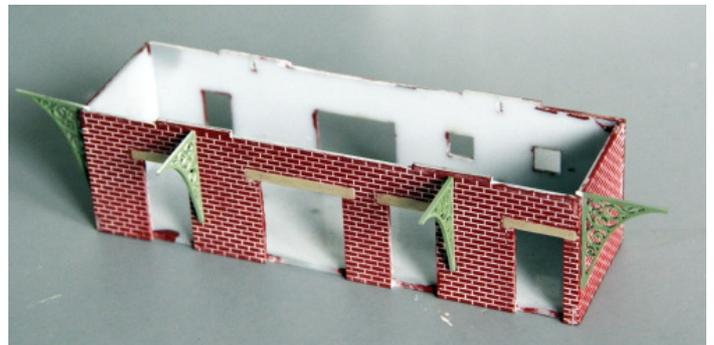

Following the directions on the bottle, wipe the brick faces clean with a damp cloth, then seal the building with a coat of Testor's Dullcote. Mount the roof supports on the walls as shown.

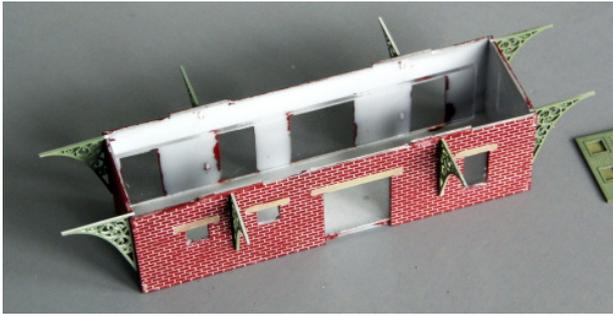

Mount the clear acrylic inside the walls, then peel the backing paper and stick the windows and doors to the glass. Apply the decals to the doors, using the tip of a hobby knife to peel off the backing paper. It is easier to apply the decals before you mount the doors to the glass.



Attach the roof to the building.

Enjoy your Amtrak Station on your layout.

Here are some other products you may enjoy in a future project:



#SMFS Summit Motel, full version



#DP-001 Domino's Pizza take-out



#CS-001 Dave's Coffee Shop



#TB-001 Taco Bell Restaurant



#TB-003 New Taco Bell Restaurant



#KFC-001 KFC Restaurant



#CVS-001 CVS Pharmacy



#LO-001 Lowe's backdrop building



Mall complex



#ML-001 Strip Mall backdrop building #1



#ML-002 Strip Mall backdrop building #2



#ML-003 Office Depot backdrop building



#ML-004 Mall street sign



#ML-005 Pier 1 Imports backdrop building



#ML-006 Dollar Tree backdrop building



#EX-001 Exxon Gas Station & Store



#SW-001 Subway Restaurant



#WH-001 Waffle House Restaurant



#SC-001 Rural Shamrock Gas Station & Store



#SH-001 Shell Gas Station & Store



#DG-001 Dollar General Store



#FS-001 Modern City Fire Station



#JL-001 Jiffy Lube



#CH-001 Polk County Court House



#BK-001 First State Bank



#HD-001 Hardee's Restaurant

Keep updated for new products on our website: www.summit-customcuts.com