

# Domino's Take-out Pizza building kit in N scale

This kit includes all building parts and signs milled in white styrene plastic, clear window glazing and self-adhesive decals. All parts fit together but may need light sanding in joints for cosmetic reasons. The model needs painting.

Some model building and painting skills are required.




Manufactured by Custom Cuts by 

Summit USA LLC, 512A Ford Street, Lake Charles, LA 70601  
[www.summit-customcuts.com](http://www.summit-customcuts.com)


## Assembly instructions for Domino's Pizza building

Thank you for buying this Dominos' Pizza building kit. Please take some time to read these instructions before you begin assembling.


This kit is milled in styrene plastic and is very easy to glue together using Plastruct Plastic Weld or similar glue products. The wall parts are tabbed and slotted for easier assembly. Take your time to identify all parts, lay them out, remove the "fillings" in the window openings and clean them for any burrs before gluing them together.

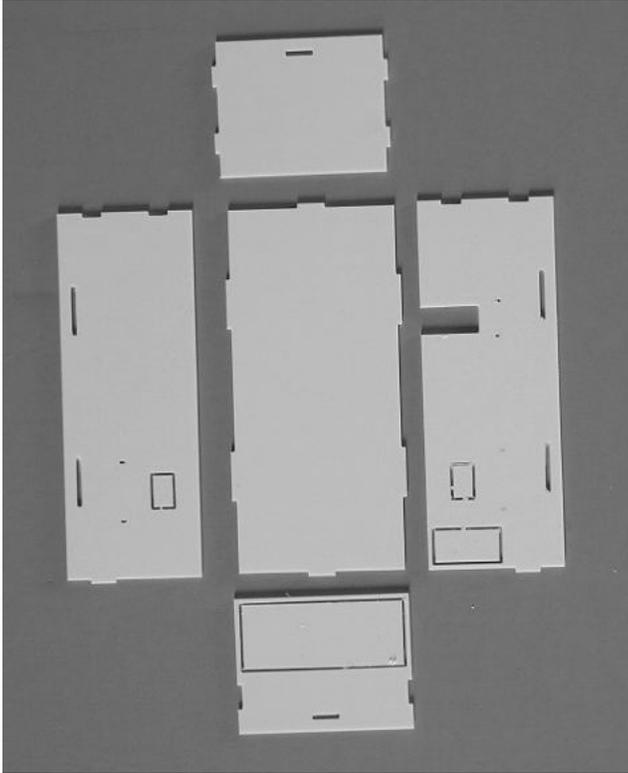


Walls and roof

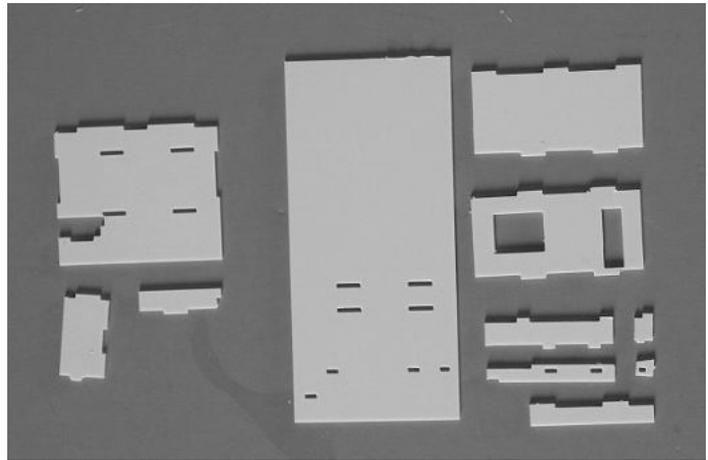


Base, inside walls and counter

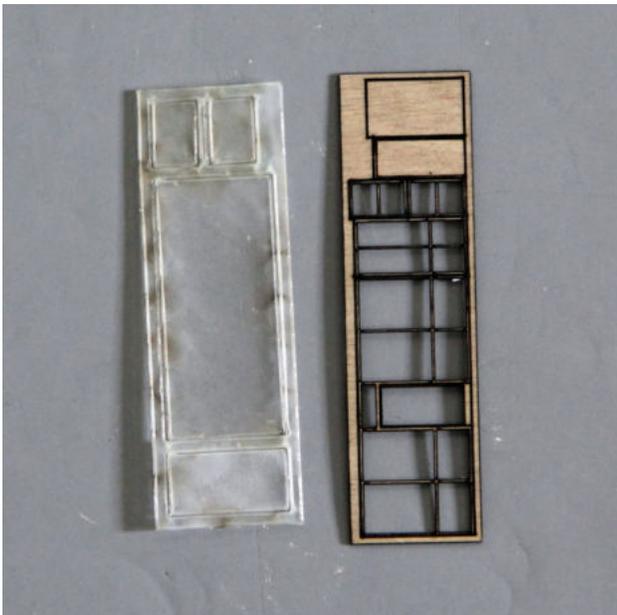


Window frames, doors and window glazing

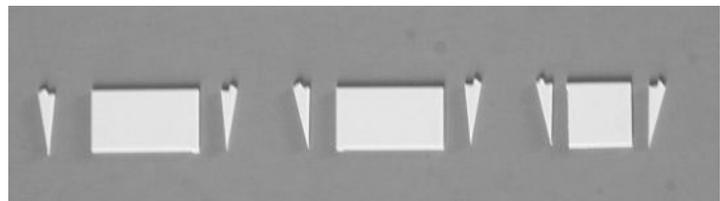

Awnings and brackets


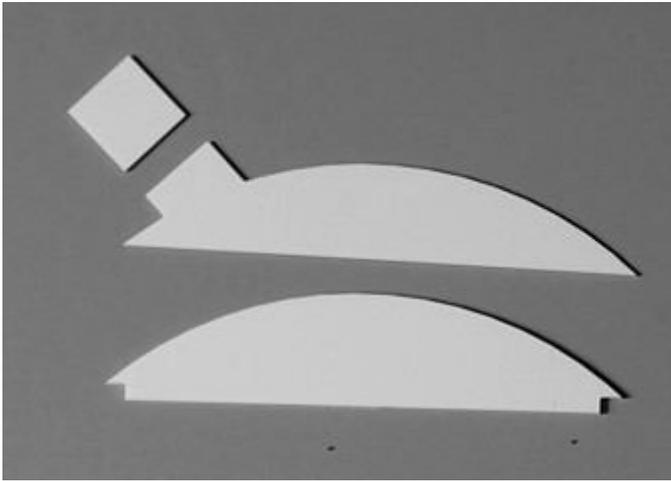


Facade sign (2 small signs for the side not shown)

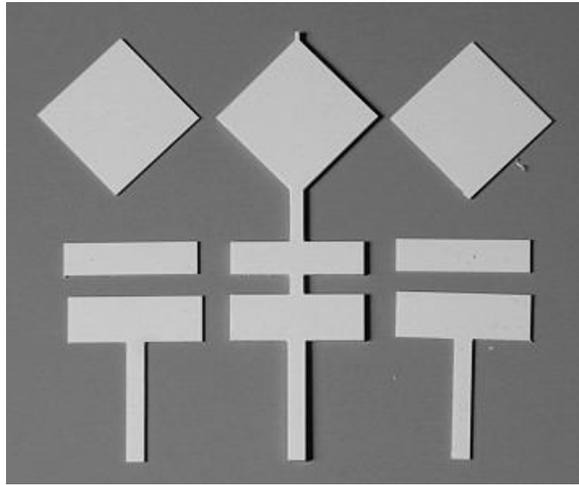



Street sign

### Assembly

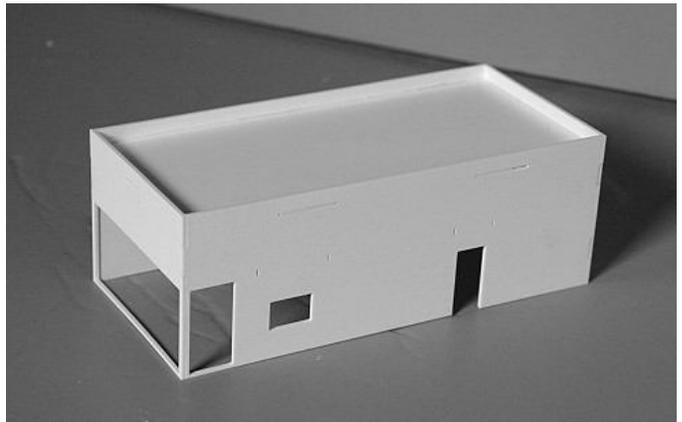
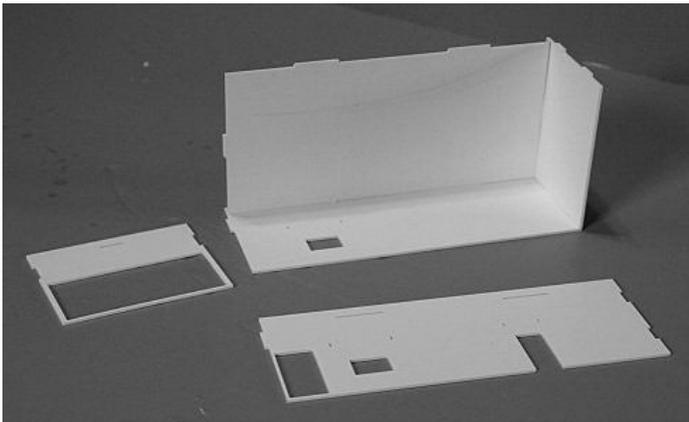


Start by attaching the walls to the roof as shown. The parts goes almost together, then apply the liquid glue and apply pressure to the part to make them go all the way together.


Assemble the parts for the counter, fitting the slots and tabs.

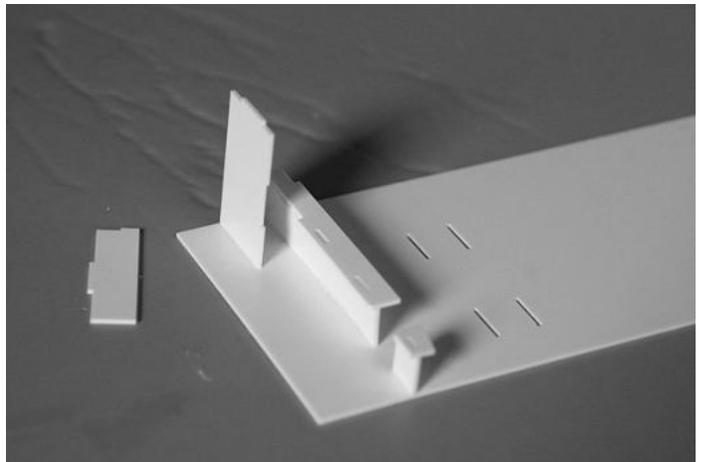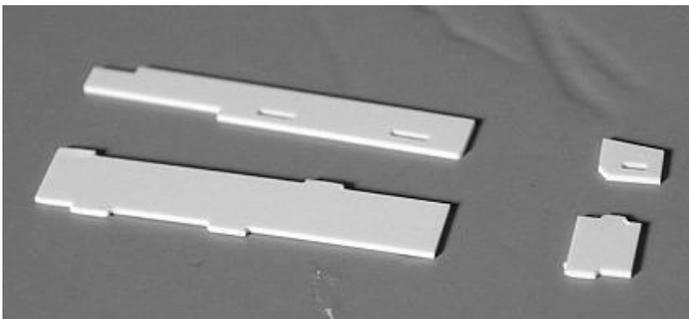


Mount the counter to the floor and mount the 2 wall parts.

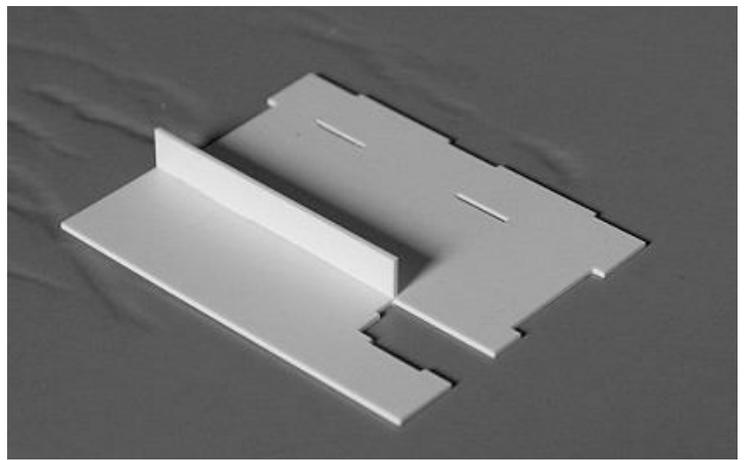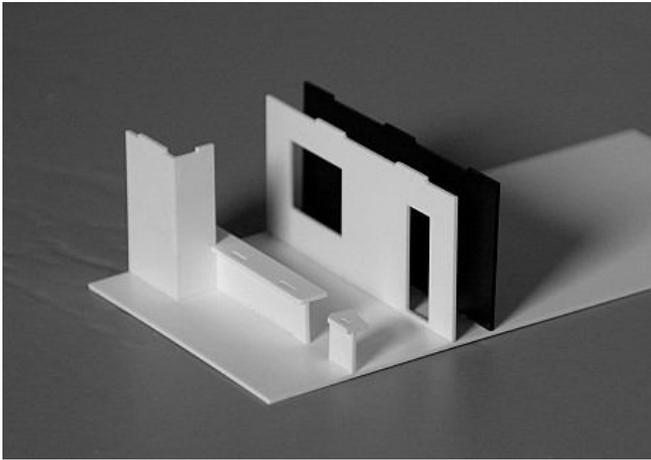

Paint the rear inner wall black then glue the wall pieces to the floor as shown. Glue the over-the-counter valance to the small inner roof piece.

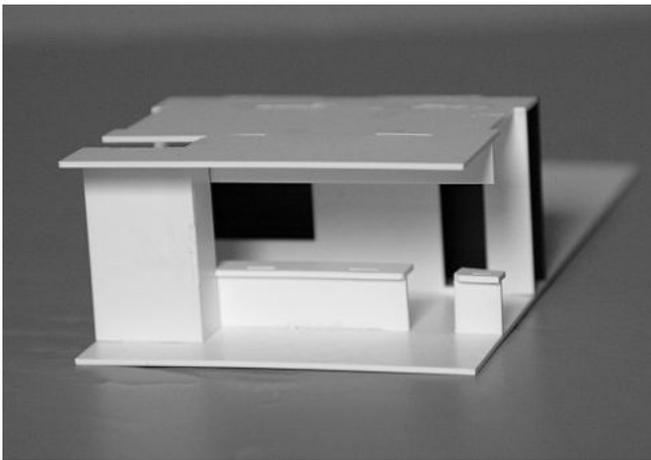

Glue the inner roof to the walls as shown.


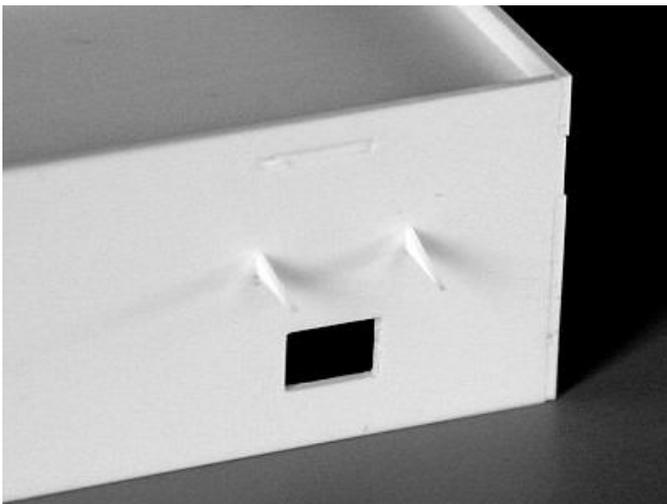


Glue the awning bracket to wall, fitting the tabs in the slots, and after the glue has set, glue on the awning.

For best looking result, you may lightly sand the joints - corners and roof. If needed, fill with putty. Use a finer grit paper, 180 and finish with 6-800 until smooth.

Now it is time to paint the building and the signs, see painting section.


After the paint has dried, mount the side door by gluing the door support (the piece slightly larger than the door) inside the wall, then glue on the door. Leave a 0.04" lip to make room for the floor.

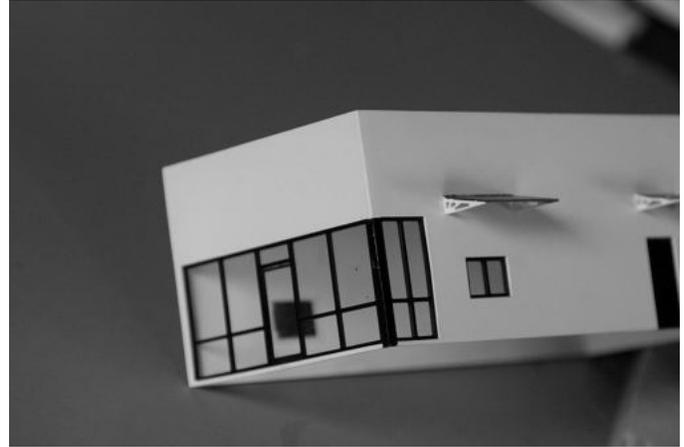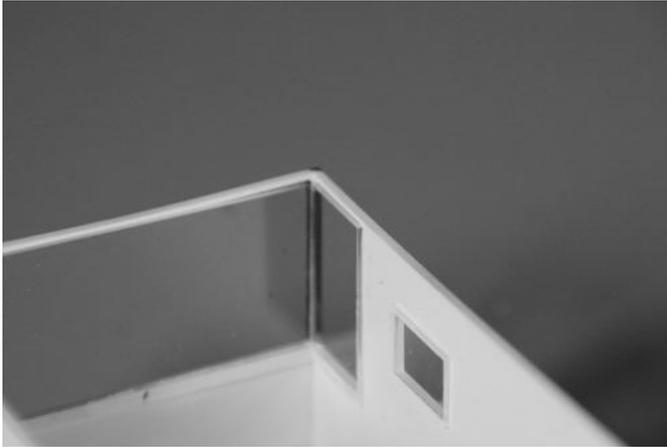

Mount the window glazing inside the wall, leaving a 0.04" lip on the bottom of the tall front and side windows (to leave room for the floor).

Peel off the protective paper or plastic from the clear window glazing and mount it inside the wall, leaving a 0.04" lip on the bottom of the tall front and side windows (to leave room for the floor).

Install the painted window frames by peeling off the backing paper and sticking the frame to the glass. Be very careful to position it correct in the first attempt, once the glue sticks you can't remove it without destroying the part.

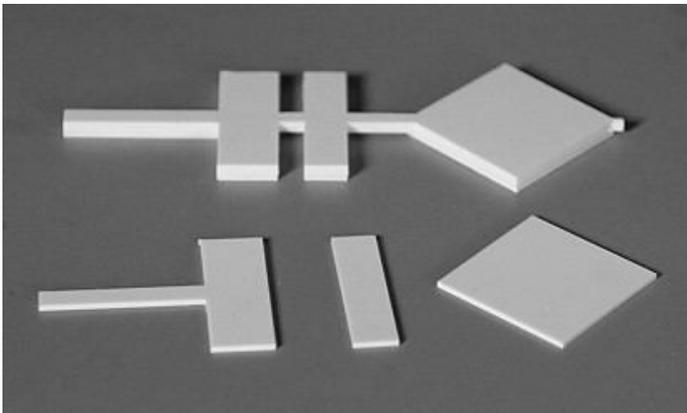

Glue the sign parts on both sides of the sign base as shown.

Glue the facade sign parts together (see parts overview)  
Do not mount it on the wall yet.

## Painting

Paint the whole building flat white. On this model I used Floquill Reefer White. For best results, give the building and the signs a coat of primer first.

Paint the street sign Testors Stainless Steel Metalizer (airbrush only) or Humbrol #56

Paint the awnings (not the brackets) a bright red, Testors 1593E

Leave the window frames on the sprue and paint them black or aluminum.

Cut the decals with a sharp hobby knife or a pair of scissors. Remove the backing paper using the tip of the knife to separate it from the decal. Be very careful handling the decals and touch the surfaces as little as possible



On the facade sign, cut out the logo square as shown. Then cut off the red stripe and attach it to the lower lip.

Peel the off the backing paper in the right corner, fold it back 1/2". Align the decal and then attach the right corner. Peel off the rest of the backing paper to attach the rest of the decal.

Mount the decals on the signs using the same method. Mount the decals on the inside walls as shown on the picture below.

### Finishing



Mount the signs on the wall using a tiny amount of white glue. The white glue will let you move the sign until it sits right.

If you want to add vents and airconditioners to the roof, we recommend Walthers #933-3286 Roof details set.

Enjoy your Domino's Pizza on your layout.

Here are some other products you may enjoy in a future project:



Taco Bell Restaurant

TB-002



Domino's Pizza

DP-002



Summit Motel

SM-002



Shell Gas Station & Store

SH-002




Dave's Coffee Shop (Denny's)

CS-002



Subway Restaurant

SW-003

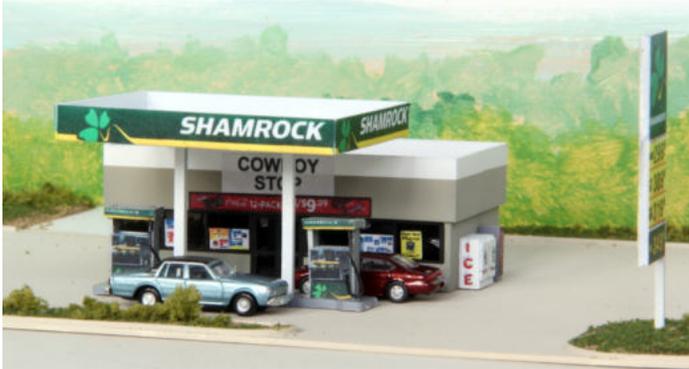

Shamrock Rural Gas Station

SC-002