

Summit Liquor Store backdrop kit in HO scale LQ-002



Parking lot base, cars, patio furniture and fence not included

This kit includes all building parts laser cut in white acrylic, clear acrylic window glazing and self-adhesive micro-plywood as well as molded styrene plastic. All parts fit together but may need light sanding in joints for cosmetic reasons. The model needs painting.

Some model building and painting skills are required.


Assembly instructions for Summit Liquor Store backdrop kit

Thank you for buying this modern Summit Liquor store backdrop kit. Please take some time to read these instructions before you begin assembling.

This kit is laser cut in acrylic and self-adhesive micro-plywood and is very easy to glue together using MicroMark Samestuff or Plastruct Plastic Weld glue. The wall parts are tabbed and slotted for easier assembly.

Take your time to identify all parts, lay them out as on the pictures and clean them for any burrs before you start gluing them together.


Handle the acrylic parts with care; they are easier breakable than the usual styrene parts.

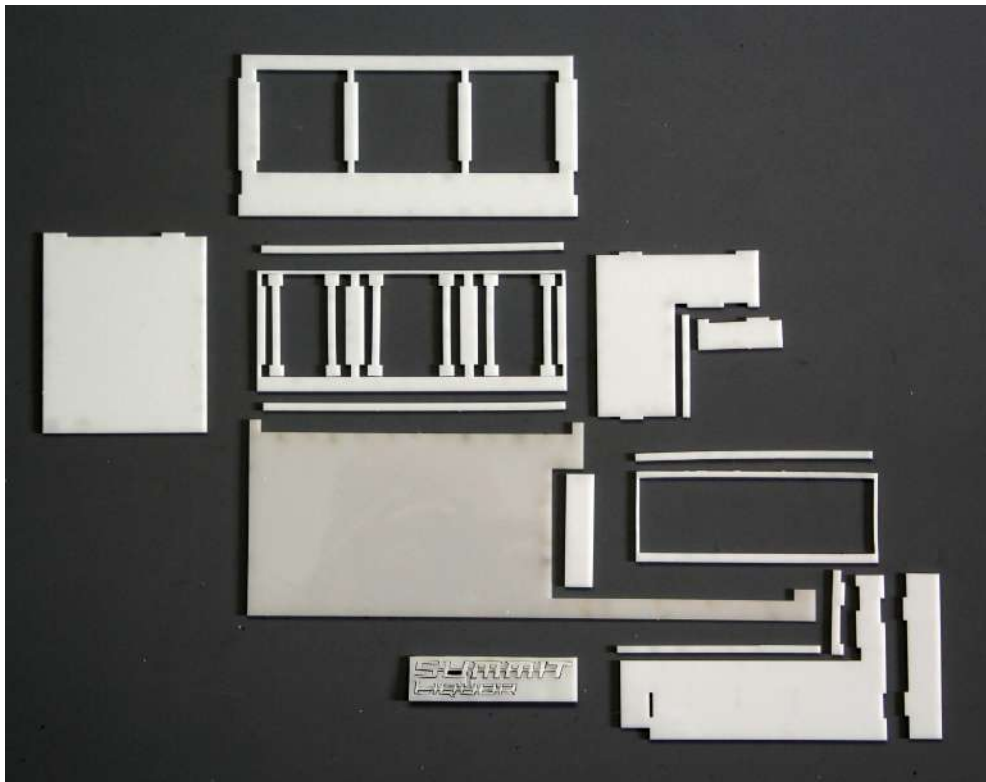

Base and walls




Roof and support strips

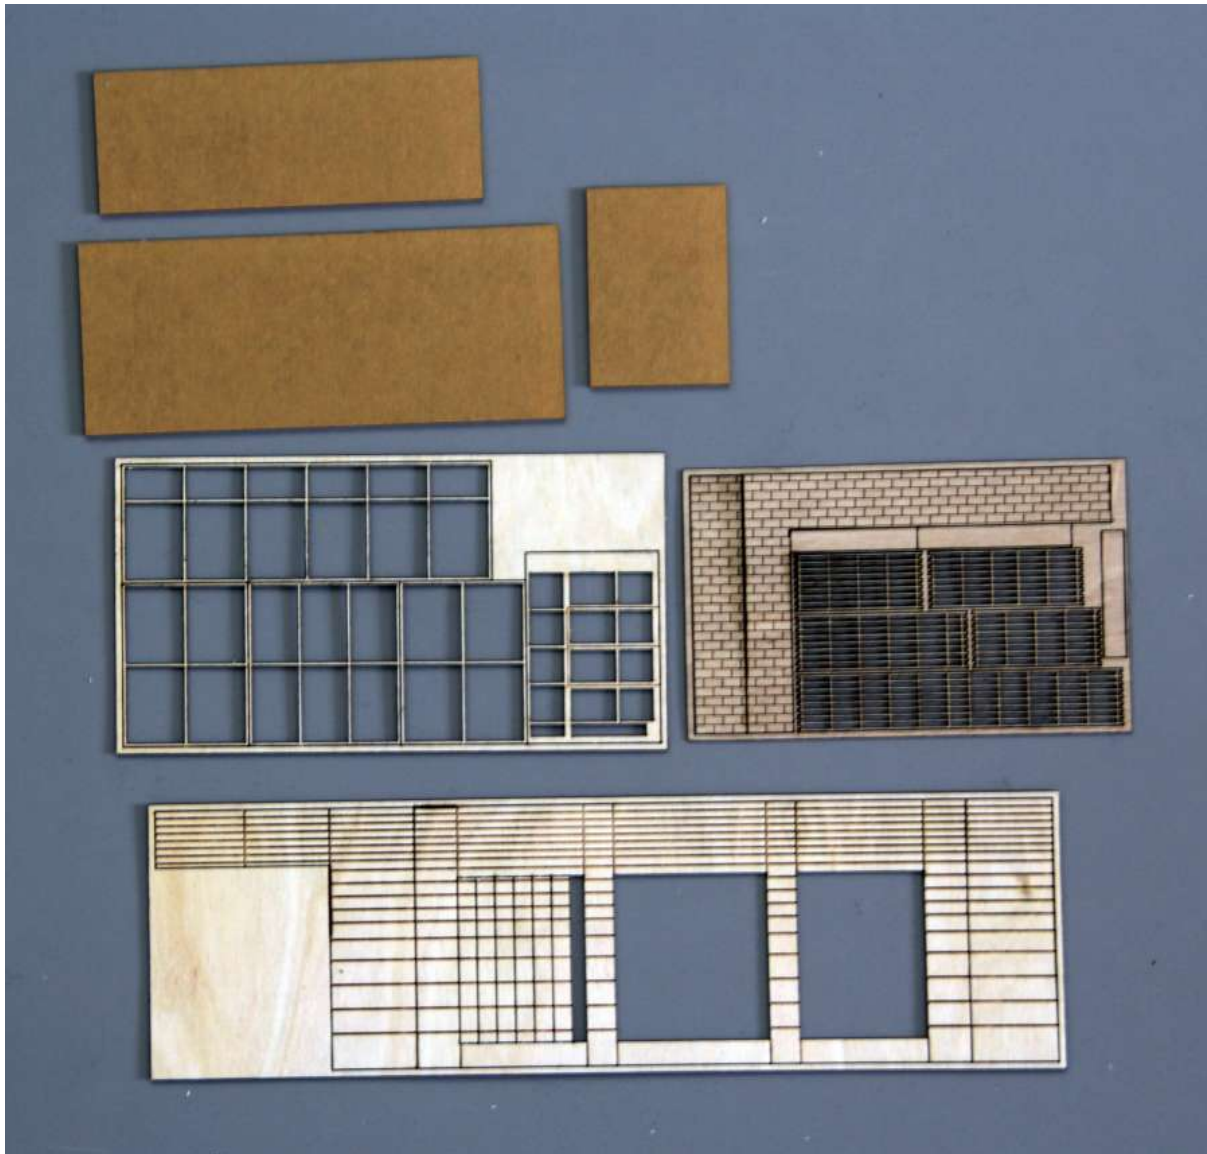


1/64" Plywood wall trim, 1/32" plywood windows, front wall panels and clear acrylic

Assembly:




If you want these instructions in color and a larger format, you can download them from our website on the product page.

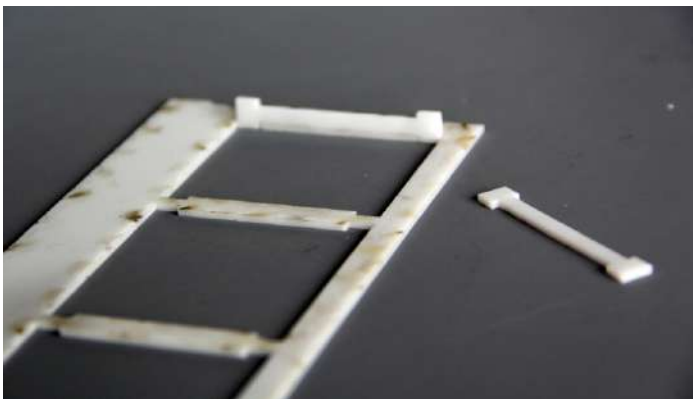



Start by gluing the small window recess wall pieces on the inside of the front wall.

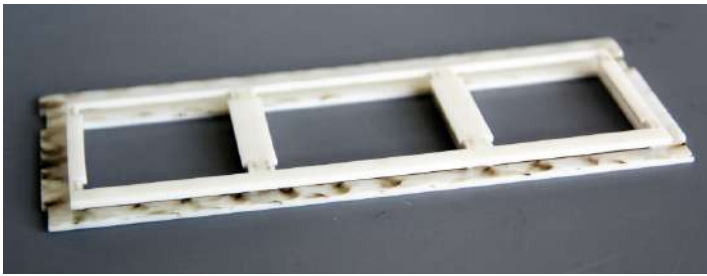

Glue on the inner wall frame as well as the top and bottom strips between the outer and inner wall frames.

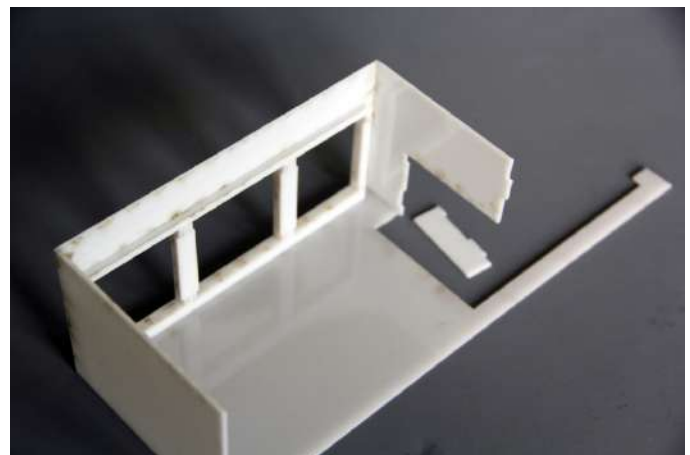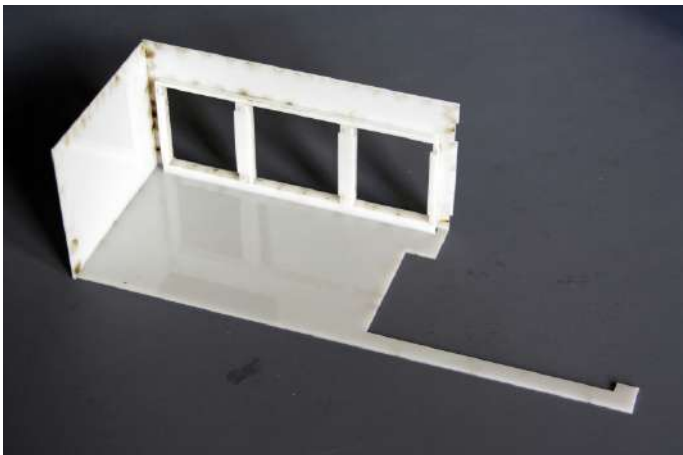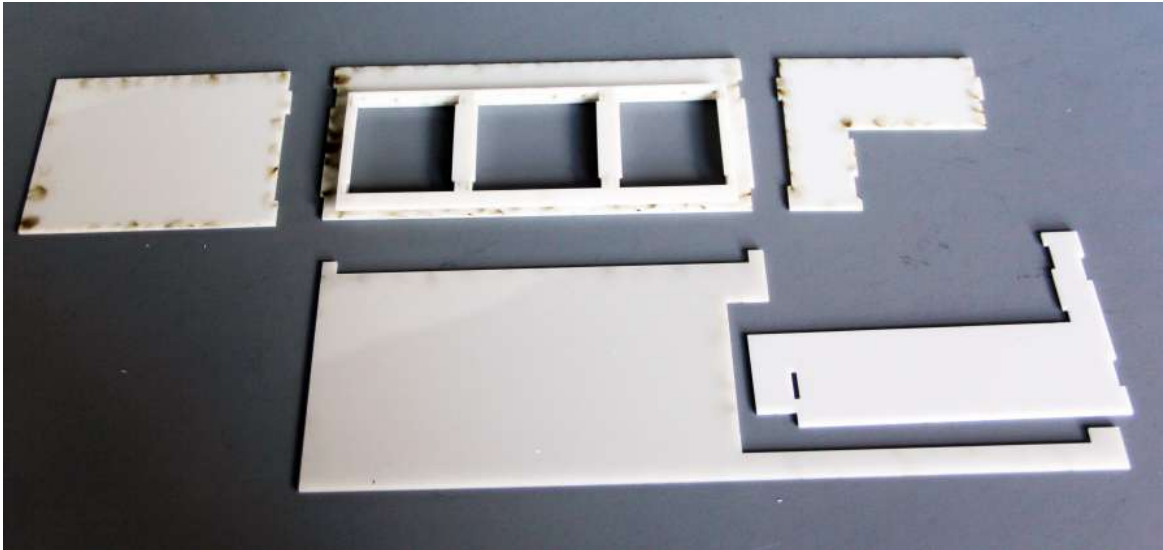


Glue the left side wall to the front wall assembly, then glue the base to the inside of the walls. Continue with the right wall pieces as shown.

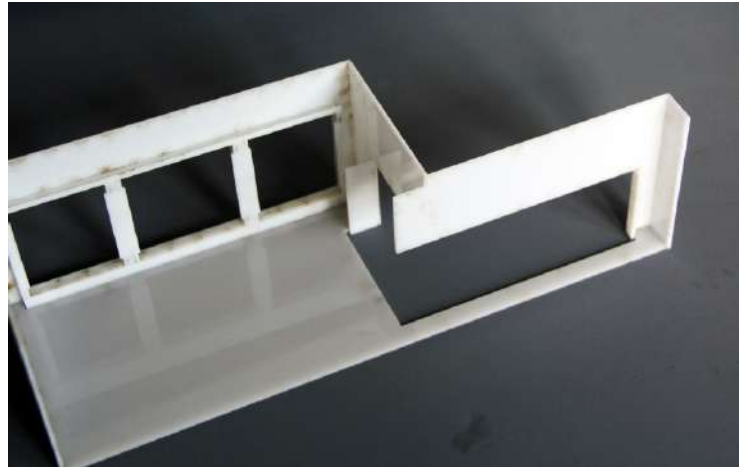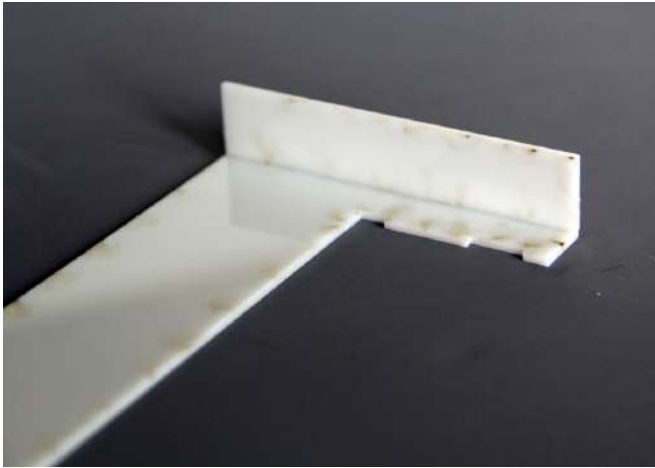

Glue the short side wall piece to the other front wall as shown. Then glue these to the base and to the entrance wall, inserting the tab in the slot. Glue on the small recess wall piece and the top strip along the edge of the window opening.




Glue the long window frame in place as shown.

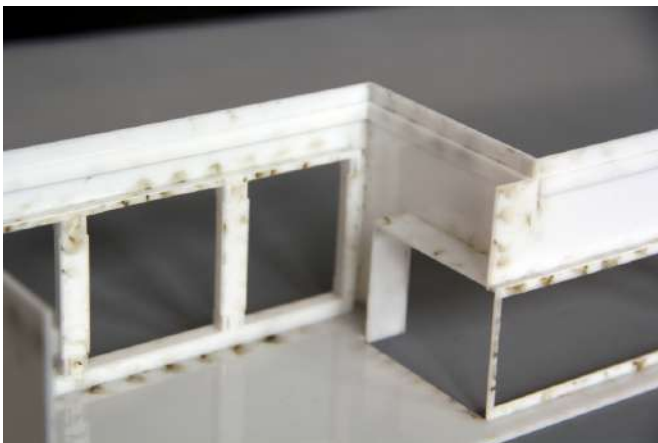

Glue on the entrance ceiling and the roof support strips along the walls. Glue on the strips over the windows and doorway is shown.


Painting & finishing:

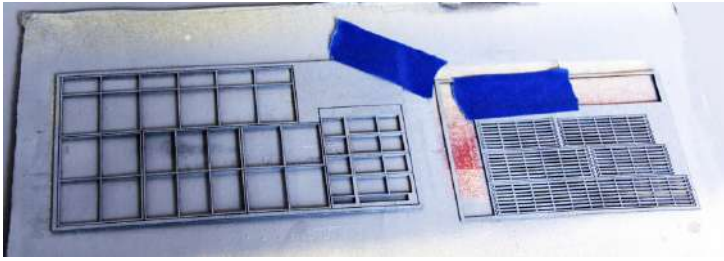



Tape the window & door frames and the metal trim to a piece of card board and spray them silver or aluminum.



Brush paint the connectors on the logo black. Then paint the letters light blue (the next day)

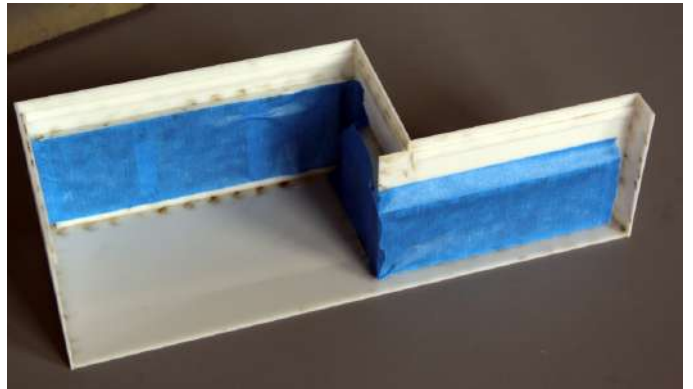


Mask off the white strips over the window and doorway. Mount some masking tape inside the windows as shown.

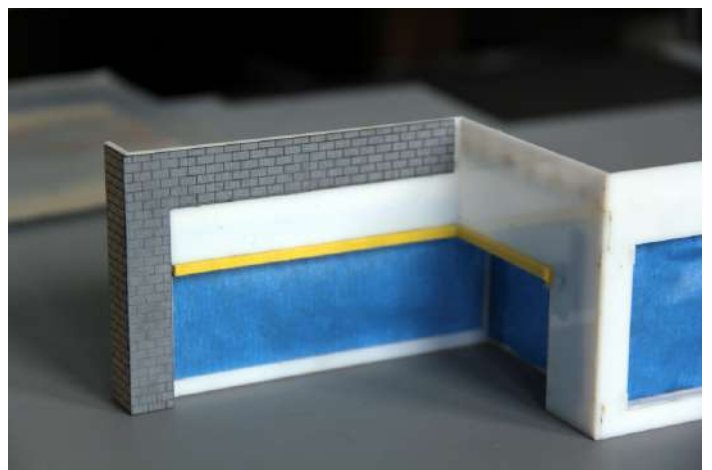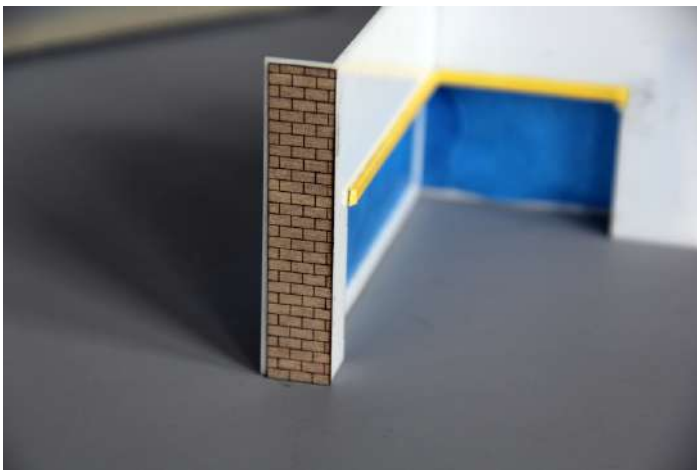

Stick the self-adhesive wall piece onto the short end wall, aligning with the corner. The front brick

wall overlaps the side wall and leaves a 1/32" gap in the corner.

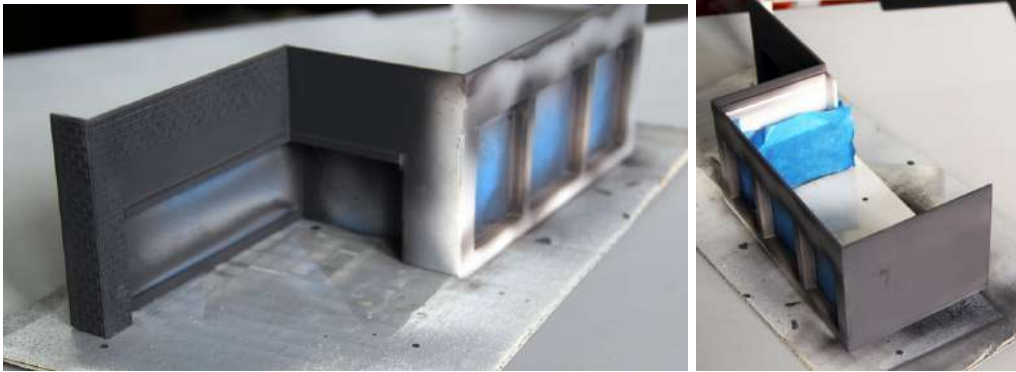

Paint the walls dark gray as shown. Also paint the right side wall dark gray.





Remove the masking tape from the white strips and insert the “metal” trim between the white strips and the bricks.




Glue the clear acrylic window glazing on as shown. If you want tinted windows as on this demo model, mount some car window film on the inside of the clear acrylic before you install them.

Before you touch the wood wall panels, spray them with a coat of Testors Dullcote. This will seal the black grooves (which are burnt wood and will smear all over the clean wood of you get it on your fingers).



When the clear coat is dry, cut all the pieces out of the sprue with a sharp knife.

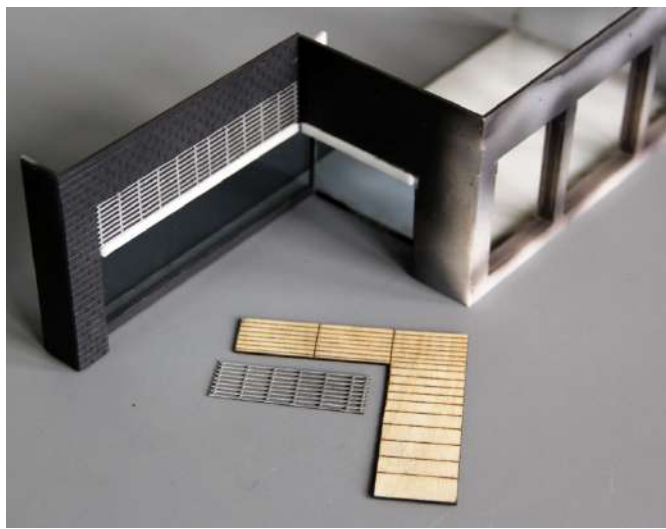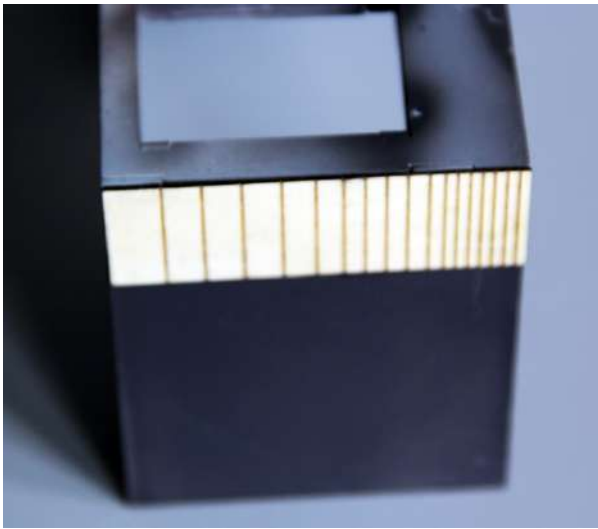


Mount the side wall piece as shown, aligning with the corner. The narrow boards at the top of the building. Be **very careful** to align the wood pieces correct in the first attempt, once the glue sticks you can't remove the piece without destroying it.

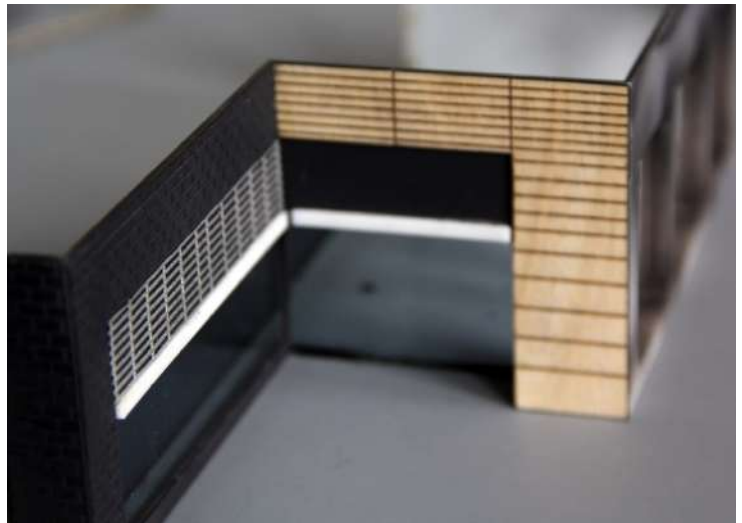


Slip the top of the wall piece into the small gap in the corner and then stick to the wall, aligning with the corner.

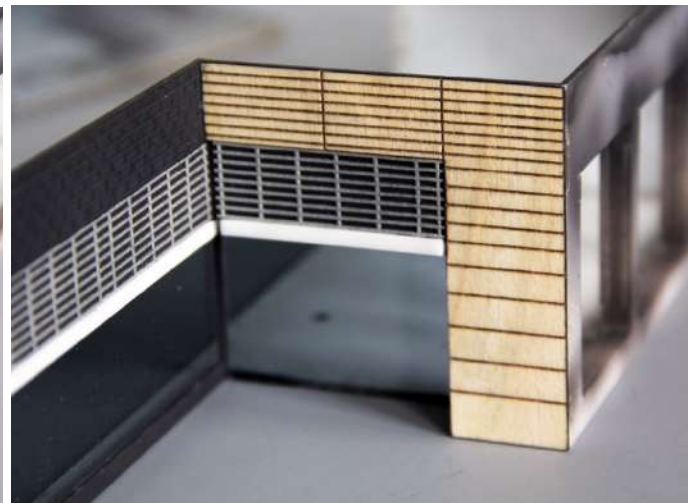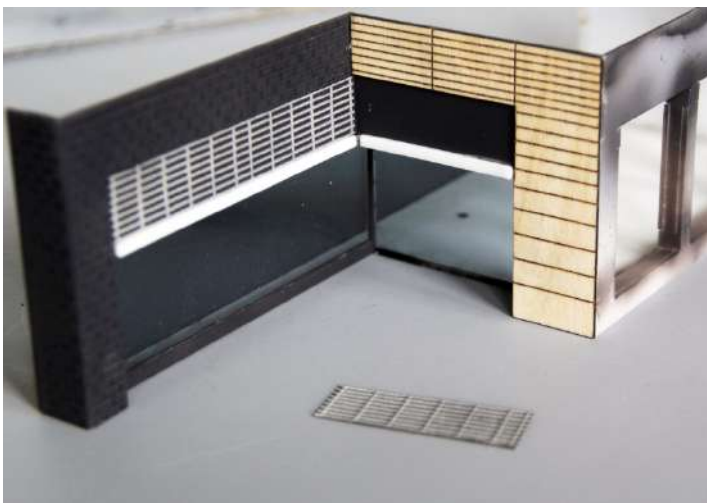

Insert the “metal” trim between the wood and the white strip.

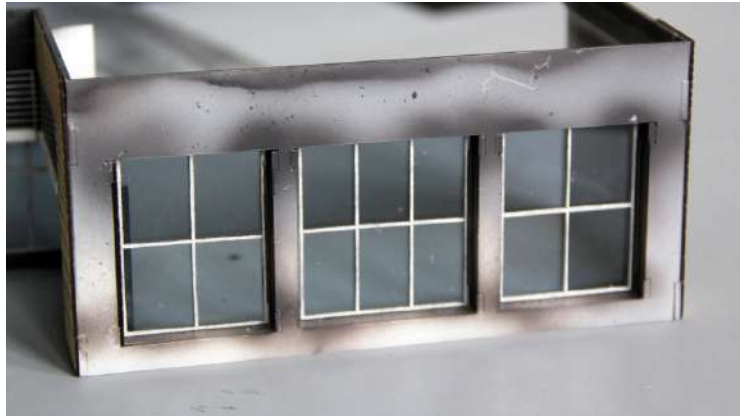

Mount the window frames and door frame onto the glass. Mount the window frames on the front windows as shown.

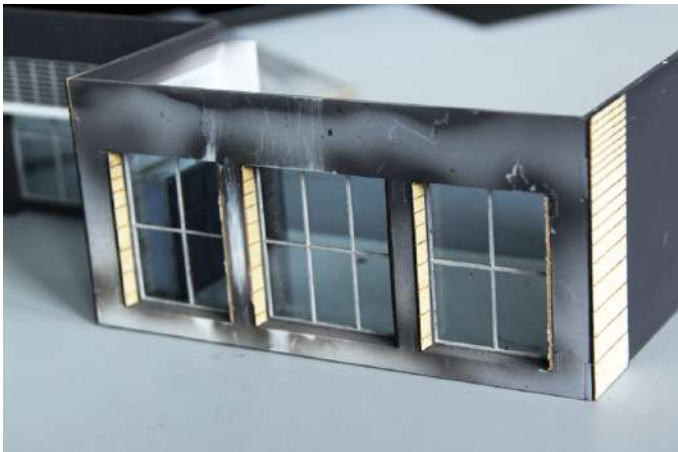

Mount the narrow wood pieces inside the window openings, then mount the front wall trim.



Mount the window sills as shown. Mount the metal grid above the front windows as shown.

Enjoy your new Liquor Store on your layout.



Prototype in
Worthington, MN

Here are some other products you may enjoy in a future project:



#DN-001 Denny's Restaurant



#DP-001 Domino's Pizza take-out



#DP-003 Domino's latest design



#CS-001 Dave's Coffee Shop



#TB-005 1970's Taco Bell



#TB-006 1980's Taco Bell



#TB-001 Taco Bell Restaurant



#TB-003 New Taco Bell Restaurant



#KFC-001 KFC Restaurant



#SW-001 Subway Restaurant



#SW-002 Subway latest design



#WH-001 Waffle House Restaurant



#HD-001 Hardee's Restaurant



#CJ-001 Carl's Jr. Restaurant



#PH-001 Pizza Hut Restaurant



#IH-001 IHOP Restaurant



#EX-001 Exxon Gas Station & Store



#SC-001 Rural Shamrock Gas Station



#CA-001 Casey's General Store



#SH-001 Shell Gas Station & Store



#JL-001 Jiffy Lube



#DG-001 Dollar General Store



#DG-002 Dollar General, new



#LO-001 Lowe's backdrop building



#TS-001 Tractor Supply Store



#CVS-001 CVS Pharmacy



#LQ-001 Summit Liquor Store



#ML-001 Strip Mall backdrop #1



#ML-002 Strip Mall backdrop #2



#ML-003 Office Depot backdrop



Mall complex



#ML-005 Pier 1 Imports backdrop



#ML-006 Dollar Tree backdrop



#BB-001 Best Buy backdrop



#BK-001 First State Bank



#BK-002 Capital One Bank



#DA-001 Discount Auto Parts



#DP-004 MKT Depot



#ST-001 Starbucks Coffee